


平面図

S=1/1000(A3)

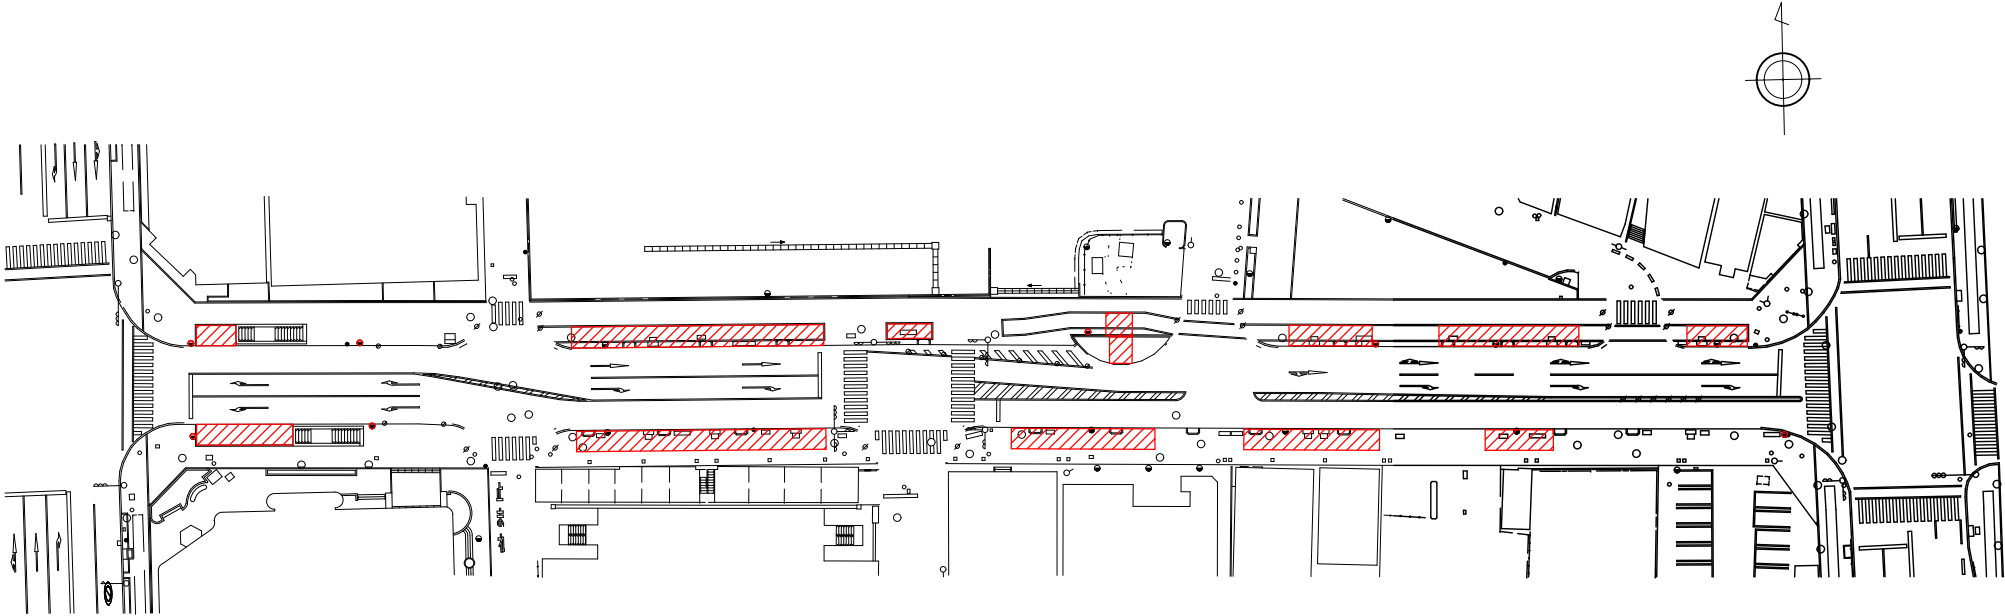

凡 例



利便増進誘導区域